Surface texture parameters according to ISO 21920



HOMMEL~ETAMIC

Efficient surface texture measurement


Surface texture is very important where it has a direct influence on the quality of the part. Therefore, it has to be defined as precisely as possible with the help of standardized surface texture parameters.

This leaflet provides an overview of the most important terms and parameters of surface metrology according to ISO 21920.

We manufacture a wide range of roughness measuring systems providing you with a large variety of evaluation possibilities – in the measuring lab as well as on the production line.

A particularly important aspect in metrology is continuous monitoring for the best possible accuracy. In our DAkkS-DKD calibration laboratory, we calibrate your supplied standards for various roughness parameters. For non-accredited parameters we issue a simpler factory calibration certificate.

Breakdown of a surface

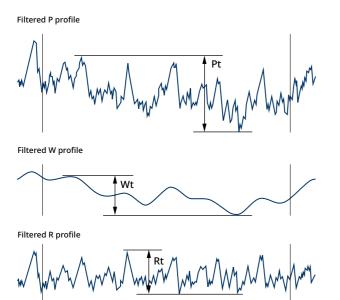

Surface profiles – total height of the profile


The profile of a surface is recorded two-dimensionally using the tracing system method.

In contrast to ISO 3274, in ISO 21920 the stylus tip radius is calculated from the recorded profile by morphological erosion before this mechanical profile is then used for the calculation of the parameters.

The primary profile (P profile) is the measured surface profile after the stylus tip radius has been removed and filtered with the profile S filter. Further filtering according to ISO 16610 produces the waviness profile (W profile) and the roughness profile (R profile). The determining parameter for the boundary between waviness and roughness is typically the nesting index Nic.

The profile type is identified by the capital letters P, R or W. In accordance with ISO 21920, all parameter definitions, except for Rxxk and Pxxk, apply to the roughness profile as well as to the primary and waviness profile.

Evaluation length – section length

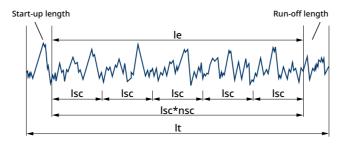


The traverse length It is the total length of the probe movement during the scanning process. It is greater than the evaluation length le in order to be able to form the roughness profile with the profile filter.

Only for Rpt, Rvt, Rp, Rv, Rz applies: le = lsc * nsc (section length times number of sections).

New in ISO 21920: for Ppt, Pvt, Pp, Pv and Pz also applies nsc = 5 and lsc = le/nsc. For P parameters, typically only the length of the workpiece section (= le) is dimensioned.

Rz, Rp, Rv, Rpt, Rvt

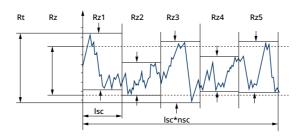

Surface texture parameters

Rz - maximum height

Mean value of the individual Rz values from the section lengths lsc

Rp - mean peak height

Mean value of the largest peak heights of all section lengths lsc

Rv - mean pit depth

Mean value of the largest pit depths of all section lengths lsc


Rpt – maximum peak height

Largest peak height of all section lengths lsc

Rvt – maximum pit depth

Largest pit depth of all section lengths lsc


Rzx, Rzx(l)

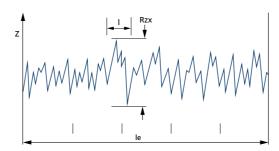

Rzx, Rzx(l) – maximum height per section

Rzx(l) corresponds to the maximum value of the difference between the highest and the lowest ordinate values within a section of length I moving over le. When the default value I = lsc is used, the specification of the length I is not required (Rzx).


а



Ra – arithmetic mean height

Ra is the arithmetic mean roughness value from the amounts of all profile values. Ra does not differentiate between peaks and pits and has therefore a relatively weak information character.

Rk, Rpk, Rpkx, Rvk, Rvkx, Rmrk1, Rmrk2, Rak1, Rak2



Rk - core height

Height of the roughness core profile

Rpk – reduced peak height

Reduced height of the peaks protruding from the roughness profile

Rpkx – maximum peak height

Rvk – reduced pit depth
Reduced depth of the pits reaching into the material from the core

Rvkx – maximum pit depth


Rrmk1, Rmrk2 – Material ratio of hills or of dales respectively
Rak1, Rak2 – Area of hills or dales respectively

Rpc

Rpc – peak count parameter


Rpc indicates the number of mean spacings of profile elements per unit length L and is calculated with the formula Rpc = L/Rsm.

Rmc(c), Rmr(dc), Rmr(p,dc) _



Rmc(c) – material ratio


Rmc indicates what ratio the totaled length in the material has assumed relative to the evaluation length (in %). The comparison is made in the specified section level c and the evaluation length le. The material ratio curve indicates the material ratio as a function of the section level.



Rmr(dc), Rmr(p,dc) – relative material ratio

Rmr indicates the material ratio at a section level cp + dc, where cp refers to the material ratio p and dc is a relative profile depth, usually less than 0. The specification of the material ratio p is not required if the default value p = 0 % is used.

Rsm

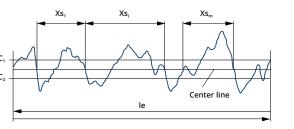

Rsm – mean profile element spacing

Rsm is the arithmetic mean value of the width of the profile elements of the roughness profile. Default values for the height discrimination for detecting the profile hills and dales in ISO 21920 are 10 % of Rp and Rv, respectively.

3 4 5

HOMMEL~ETAMIC

We assist you worldwide

Our qualified employees are available to assist you across the globe. We have subsidiaries and distribution partners in key industrial nations, meaning that we are always close by to offer you optimum support as a reliable partner.



JENOPTIK Industrial Metrology Germany GmbH | Drachenloch 5 78052 Villingen-Schwenningen | Germany | P +49 7721 6813-0 F +49 7721 6813-444 | metrology@jenoptik.com | www.hommel-etamic.com

Tolerance acceptance rules

According to ISO 21920 the surface measurement should be made where the highest values are to be expected (visual determination).

Tmax

The maximum tolerance acceptance rule Tmax is set as a standard and does not need to be specified in the drawing entries. The surface is accepted as good if the measured values of a parameter do not exceed the specified maximum value.

T16 %

If the 16 % tolerance acceptance rule is to apply, this must be indicated in the drawing entries with the T16 % symbol. The surface is accepted as good if no more than 16 % of the measured values of a parameter exceed the specified maximum value. Further information on this rule can be found in the ISO 21920 standard.

Selection of the measurement conditions

ISO 21920 does not distinguish between a periodic and an aperiodic profile. The selection of the measurement conditions is based on the type of tolerance limit: upper tolerance limit U, lower tolerance limit L, or bilateral tolerance limits UL.

The first parameter mentioned in the drawing specification determines the measuring conditions used. In the simplest case, the tolerance is sufficient.

In the Evovis software, the measurement condition tables are used automatically.

Measurement conditions: Basic default settings for all parameters

Criterion	Default setting			
Profile extraction method	Mechanical profile			
Profile direction	The direction that gives the maximum values of the roughness height characteristics (perpendicular to the prevail direction of the machining tracks)			
Profile position	The profile position depends on the tolerance acceptance rule according to ISO 21920-1. For the maximum tolera acceptance rule: location on the part of the surface where the critical values are to be expected. If this location cabe clearly identified, separate tracks must be evenly distributed over this part of the surface.			
Tolerance type	Upper tolerance limit			
Tolerance acceptance rules	Maximum tolerance acceptance rule Tmax acording to ISO 21920-1			
Profile S filter type	Gaussian filter according to ISO 16610-21			
Profile L filter type (for R parameters) Profile S filter type (for W parameters)	Gaussian filter according to ISO 16610-21 Exception: The default L filter for Rk, Rpk, Rvk, Rpkx, Rvkx, Rmrk1, R Rak1, Rak2, Rpq, Rmq and Rvq is the robust second-order Gaussian filter according to ISO 16610-31			
Association procedure and element of the profile F operator	Association and removal of the specified shape element with the smallest total deviation square			


Measurement conditions: Default settings for parameters based on the upper tolerance limit¹

Specified parameter	Unit	Upper tolerance limit U of the specified parameter					
Rz	μm	U ≤ 0.16	0.16 < U ≤ 0.8	0.8 < U ≤ 16	16 < U ≤ 80	U > 80	
Ra	μm	U ≤ 0.02	0.02 < U ≤ 0.1	0.1 < U ≤ 2	2 < U ≤ 10	U > 10	
Rp	μm	U ≤ 0.06	0.06 < U ≤ 0.3	0.3 < U ≤ 6	6 < U ≤ 30	U > 30	
Rv	μm	U ≤ 0.10	0.10 < U ≤ 0.5	0.5 < U ≤ 10	10 < U ≤ 50	U > 50	
Rq	μm	U ≤ 0.032	0.032 < U ≤ 0.16	0.16 < U ≤ 3.2	3.2 < U ≤ 16	U > 16	
Rzx	μm	U ≤ 0.23	0.23 < U ≤ 1.15	1.15 < U ≤ 23	23 < U ≤ 115	U > 115	
Rt	μm	U ≤ 0.26	0.26 < U ≤ 1.3	1.3 < U ≤ 26	26 < U ≤ 130	U > 130	
Pt	μm	U ≤ 0.27	0.27 < U ≤ 1.35	1.35 < U ≤ 27	27 < U ≤ 135	U > 135	
Setting class	-	Sc1	Sc2	Sc3	Sc4	Sc5	
Nesting index of profile L filter Nic (cut-off λc)	mm	0.08	0.25	0.8	2.5	8	
Evaluation length le*	mm	0.4	1.25	4	12.5	40	
Nesting index of prfile S filter Nis (cut-off λ s)	μm	2.5	2.5	2.5	8	25	
Maximum sampling distance dx	μm	0.5	0.5	0.5	1.5	5	
Maximum nominal tip radius rtip	μm	2	2	2	5	10	
Only for setion length parameters, e. g. Rz. Rp. Rv							
Section length lsc**	mm	0.08	0.25	0.8	2.5	8	
Number of sections nsc	-	5	5	5	5	5	


^{*} Exception: the default evaluation length le for P parameters is the length of the specified geometry element

¹ Default settings based on the lower tolerance limit L and the bilateral tolerance limit UL are shown in the corresponding tables in ISO 21920

Drawing entries according to ISO 21920

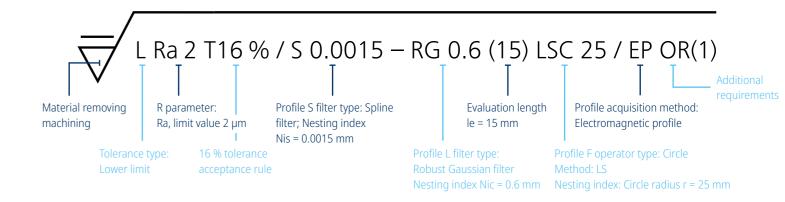


Minimum information in drawings




The minimum specification is only allowed for the following parameters with defined defaults: Rz, Ra, Rp, Rv, Rq, Rzx, Rt and Pt.


Information on the machining process

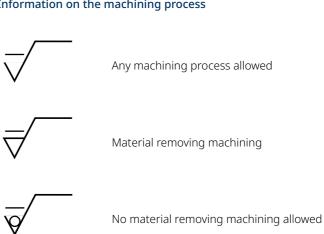


Examples




Material removing machining; $Rz = max. 4 \mu m$




Material removing machining; upper and lower limit value for Ra demanded: Ra = min. 1 µm and max. 4 µm




machining; P profile; traverse length = 2 mm;



Material removing machining lower limit value for Rz demanded; Rz = min. 2.5 µm



Material removing machining; Rzx = max. 4 um: Sc3 determines the measurement and filter conditions (deviating from the default values determined by the tolerance)



Material removing machining; Rz = max. 1 µm; filter selection Nis = 0.008 mm and Nic = 2.5 mm (the remaining measurement and filter conditions are derived from Nic)

12

Pt = max, 4 um

^{**} Exception: the default section length lsc for P parameters from section lengths is le/5