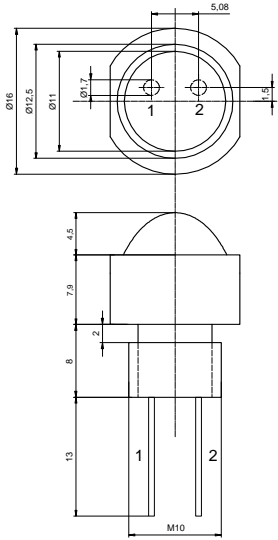


Radiation	Type	Technology	Case
Infrared	4 W	AlGaAs/GaAlAs	Plastic lens, metal case

 <p>Outline:</p> <p>H = 12.4 mm (± 0.5)</p> <p>D = 16 mm (± 0.5)</p> <p>Thread M10 x 1,5</p> <p>Pin 1 – cathode</p> <p>Pin 2 – anode</p>	<p>Description</p> <p>High-power infrared-LED in black anodised aluminium case, with thread socket for easy handling and heat sink mounting</p>
	<p>Applications</p> <p>Medical appliances, remote control and optical communications, light barriers, measurement systems</p>

Absolute Maximum Ratings

at T_{amb} = 25°C, on heat sink (S ≥ 200 cm²), unless otherwise specified

Parameter	Test conditions	Symbol	Value	Unit
DC forward current	on heat sink	I _F	1.5	A
Peak forward current	t _p ≤ 10 μs, f ≤ 500 Hz	I _{FM}	2.0	A
Power dissipation	on heat sink	P	4	W
Operating temperature range	on heat sink	T _{amb}	-25 to +100	°C
Storage temperature range	on heat sink	T _{stg}	-25 to +100	°C
Junction temperature	on heat sink	T _j	100	°C

Electrical Characteristics

T_{amb} = 25°C, unless otherwise specified

Parameter	Test conditions	Symbol	Min	Typ	Max	Unit
Forward voltage	I _F = 350 mA	V _F		1.6	1.9	V
Forward voltage*	I _F = 1000 mA	V _F		2.0	2.3	V
Switching time	I _F = 350 mA	t _r , t _f		10/22		ns
Reverse voltage	I _R = 10 μA	V _R	5			
Thermal resistance junction-case		R _{thJC}		10		K/W

*only recommended on optimal heat sink

We reserve the right to make changes to improve technical design and may do so without further notice. Parameters can vary in different applications. All operating parameters must be validated for each customer application by the customer.

Optical Characteristics


at $T_{amb} = 25^{\circ}C$, on heat sink ($S \geq 200 \text{ cm}^2$), unless otherwise specified

Parameter	Test conditions	Symbol	Min	Typ	Max	Unit
Radiant power	$I_F = 350 \text{ mA}$	Φ_e	70	90		mW
Radiant power*	$I_F = 1000 \text{ mA}$	Φ_e		240		mW
Radiant intensity	$I_F = 350 \text{ mA}$	I_e		210		mW/sr
Radiant intensity*	$I_F = 1000 \text{ mA}$	I_e		615		mW/sr
Peak wavelength	$I_F = 350 \text{ mA}$	λ_p	860	870	880	nm
Spectral bandwidth at 50%	$I_F = 350 \text{ mA}$	$\Delta\lambda_{0.5}$		42		nm
Viewing angle	$I_F = 350 \text{ mA}$	φ		35		deg

*only recommended on optimal heat sink

Note: All measurements carried out with JENOPTIK Polymer Systems equipment, on blank aluminium heat sink, $S = 180 \text{ cm}^2$, passive cooling. Measurement results and curve characteristics obtained with other heat sinks may differ.

**Typical wavelength shift vs. forward current
(rel. to λ_p @ $I_F = 350 \text{ mA}$)**

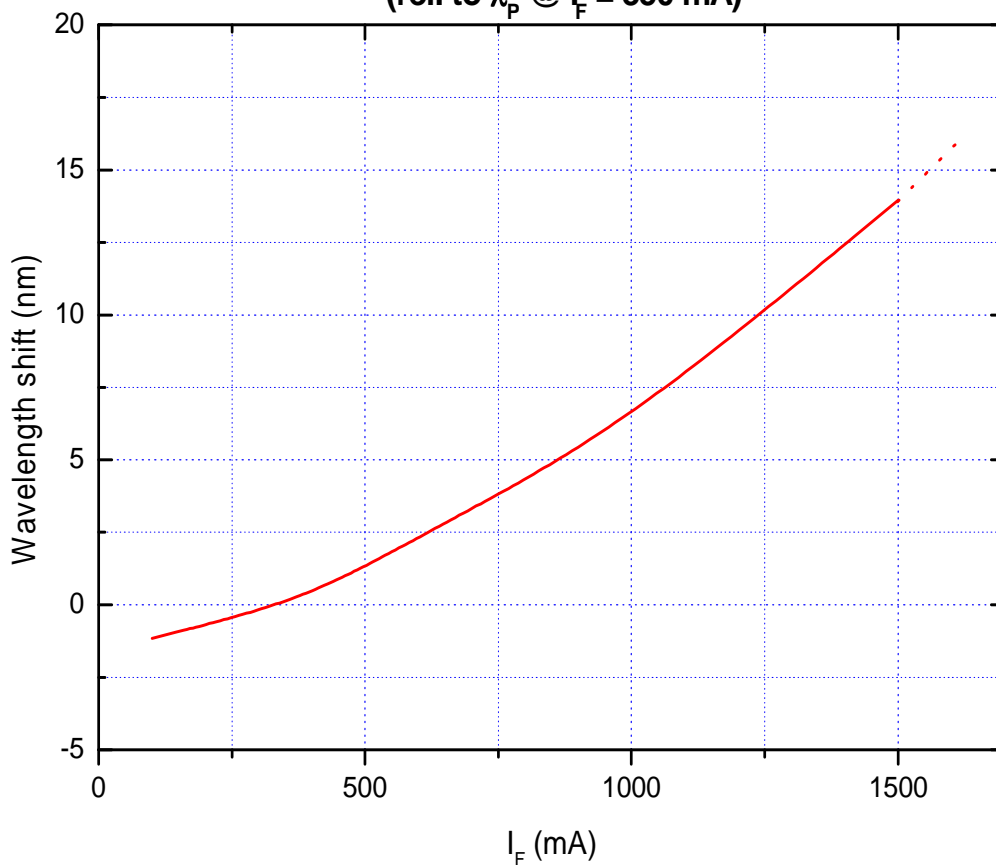


We reserve the right to make changes to improve technical design and may do so without further notice. Parameters can vary in different applications. All operating parameters must be validated for each customer application by the customer.


JENOPTIK Polymer Systems GmbH, D-12555 Berlin, Köpenicker Str.325 b, Haus 201

Tel.: +49-30-6576 2543, Fax : +49-30-6576 2545


Radiant power vs. forward current (typical)
 normalized to $\Phi_E @ I_F = 350 \text{ mA}$

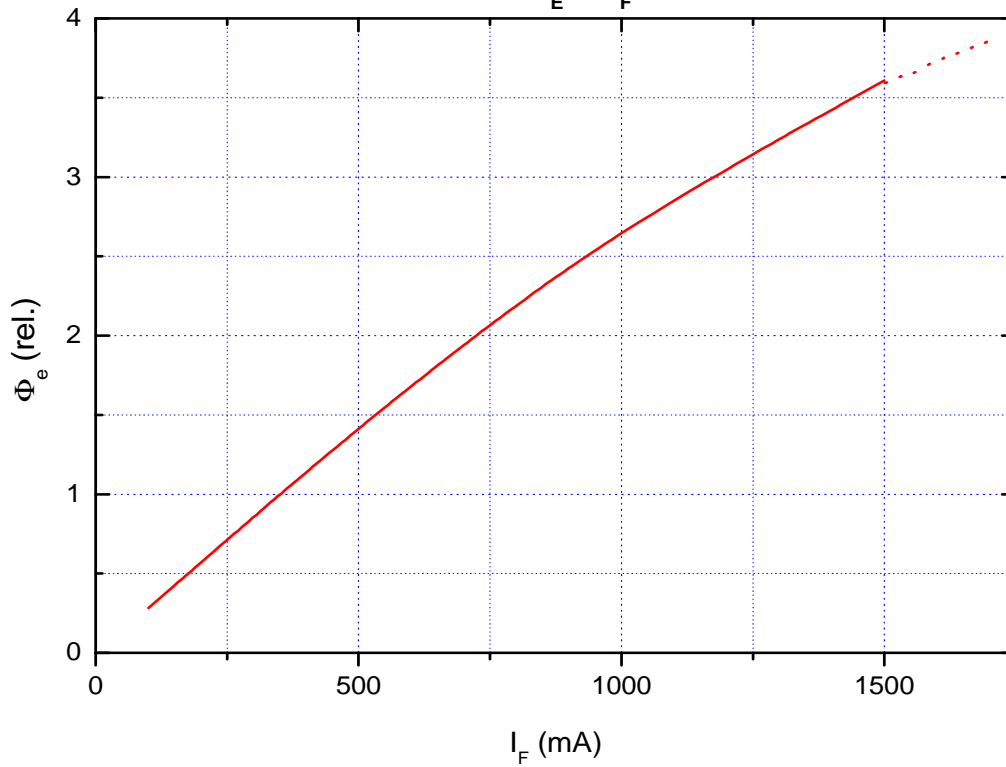

Forward voltage vs. forward current (typical)

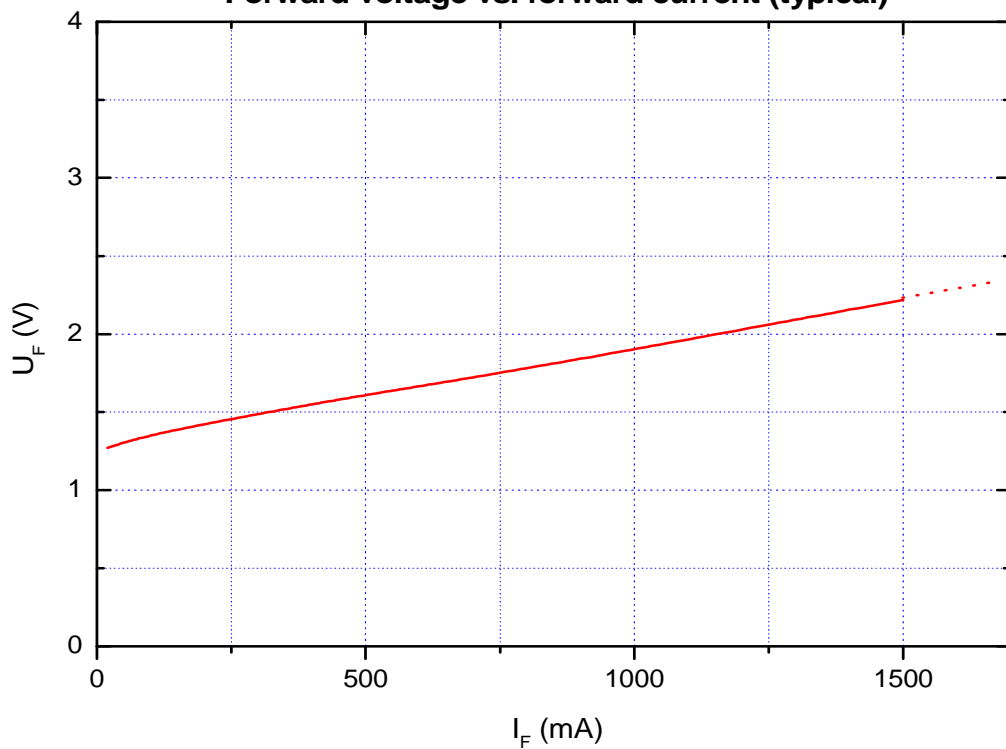

We reserve the right to make changes to improve technical design and may do so without further notice. Parameters can vary in different applications. All operating parameters must be validated for each customer application by the customer.

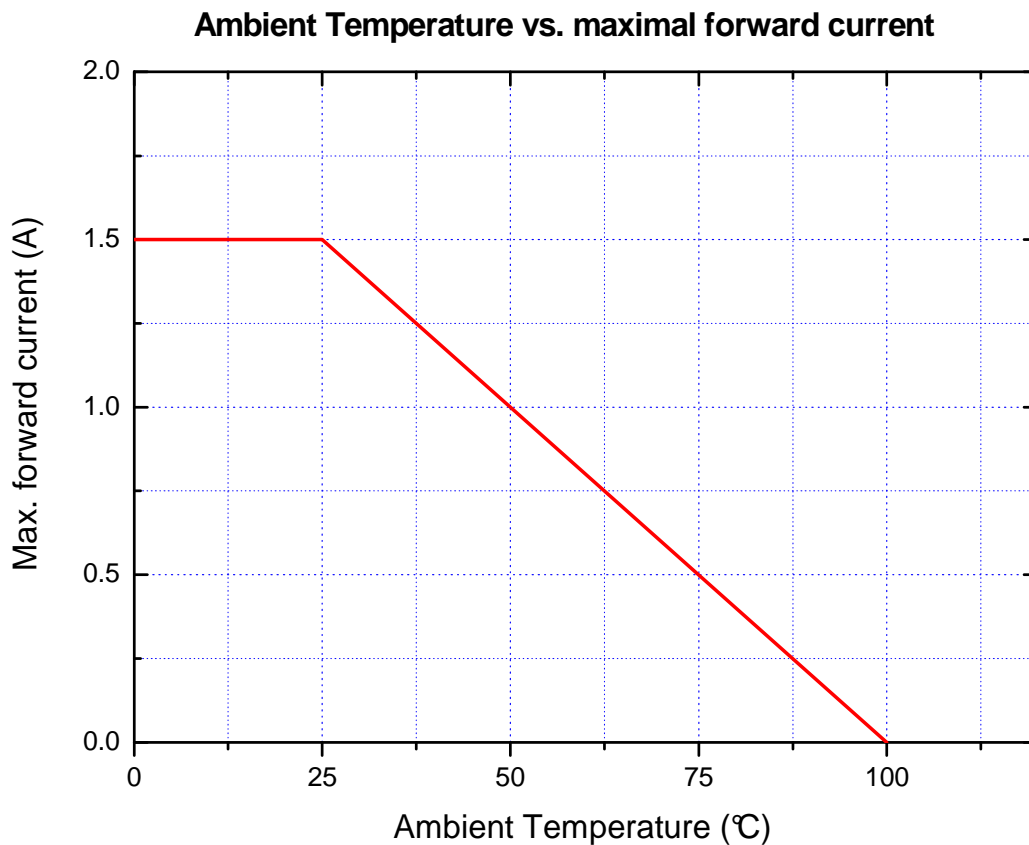

Remarks concerning optical radiation safety*

At low forward current (<250 mA), and continuous operation, this LED may be classified as LED product *Class 1*, according to standard IEC 60825-1:A2. *Class 1* products are safe to eyes and skin under reasonably predictable conditions. This implicates a direct observation of the light beam by means of optical instruments.


When driven with higher continuous forward current, (up to max. DC current), this product should be classified as LED product *Class 1M*, according to standard IEC 60825-1:A2. *Class 1M* products are safe to eyes and skin under normal conditions, including when users view the light beam directly. *Class 1M* products produce either a highly divergent beam or a large diameter beam. Therefore only a small part of the whole light beam can enter the eye. However, such optical products can be harmful to the retina if the beam is viewed using magnifying optical instruments. Therefore, users should not incorporate optics that could concentrate the output into the eyes.

*Note: Safety classification of an optical component mainly depends on the intended application and the way the component is being used. Furthermore, all statements made to classification are based on calculations and are only valid for this LED "as it is", and at continuous operation. Using pulsed current or altering the light beam with additional optics may lead to different safety classifications. Therefore these remarks should be taken as recommendation and guideline only.


Handling precautions

To prevent damage to the LED during soldering and assembly, following precautions have to be taken into account.


a) The bending point of the lead frame should be located at least 2.5 mm away from the body.

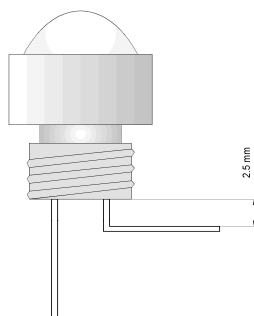


b) While bending, the base of the lead frame has to be fixed with radio pliers or similar.

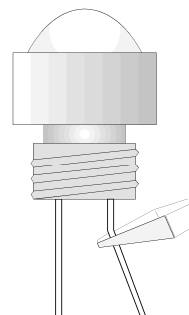

c) To ensure an adequate strain relief, the lead frames have to be firmly fixed during soldering.

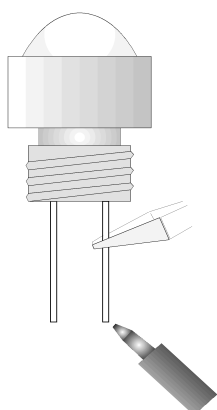

d) Avoid any torsion or tensile loading of the lead frames, especially when they have been heated after being soldered.

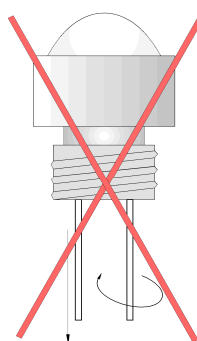

e) LEDs are static sensitive devices, so adequate handling precautions have to be taken, e.g. wearing grounding wrist straps.



ESD

We reserve the right to make changes to improve technical design and may do so without further notice. Parameters can vary in different applications. All operating parameters must be validated for each customer application by the customer.

JENOPTIK Polymer Systems GmbH, D-12555 Berlin, Köpenicker Str.325 b, Haus 201

Tel.: +49-30-6576 2543, Fax : +49-30-6576 2545